
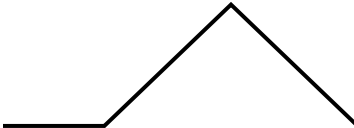


EOM

 
ENGINEERING OPERATION
& MAINTENANCE MANUAL

PS400, PS800, and PS1500 Advanced™ Metal Alloy C Pump

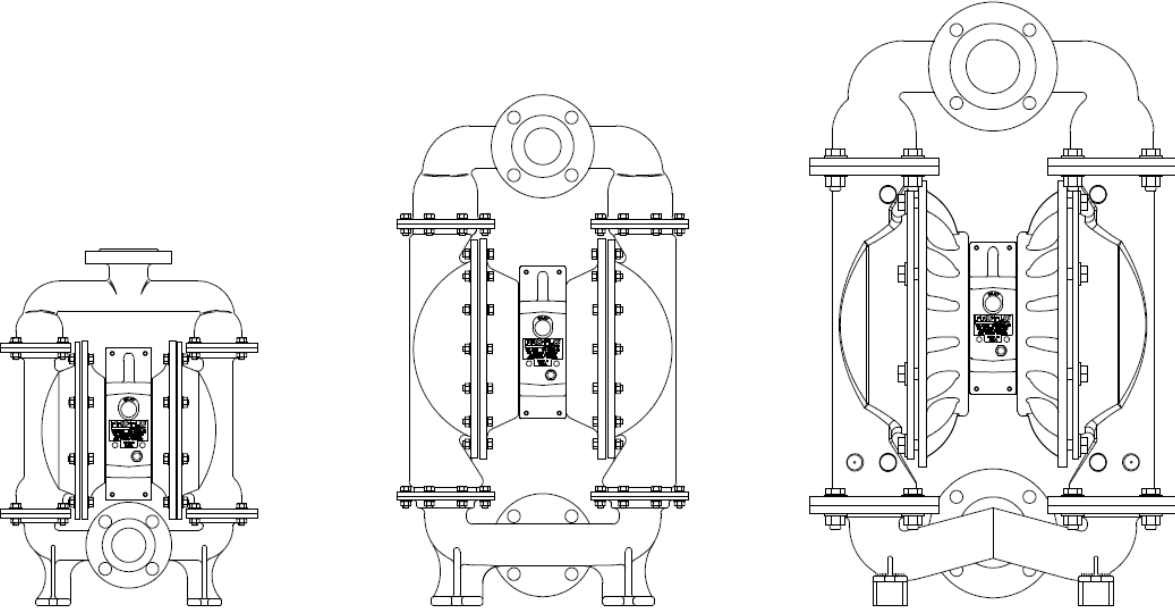

Where Innovation Flows

WILDEN®



Copyright

Copyright 2018 PSG®, a Dover Company. All rights reserved.

PSG reserves the right to modify the information and illustrations in this document without prior notice. The product described in this document is furnished under a license agreement or nondisclosure agreement. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording, without the written permission of PSG, a Dover Company, except as described by the terms of those agreements.

This is a non-contractual document.

Trademarks

PSG and the PSG logo are registered trademarks of PSG. Wilden® is a registered trademark of PSG California LLC. Pro-Flo® SHIFT, Pro-Flo®, and Wil-Flex® are registered trademarks of PSG California LLC. Chem-Fuse™, Pure-Fuse™, Saniflex™, and Bunalast™ are trademarks of PSG California LLC.


All trademarks, names, logos and service marks (collectively “trademarks”) in this document are registered and unregistered trademarks of their respective owners. Nothing contained in this document should be construed as granting any license or right to use any trademark without the prior written permission of the trademark owner.

Warranty

Each and every product manufactured by Wilden is built to meet the highest standards of quality. Every pump is functionally tested to ensure integrity of operation. Wilden warrants that pumps, accessories and parts manufactured or supplied by it to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first.

For more information, and to register your Wilden pump for warranty, please visit <https://www.psgdover.com/wilden/support/warranty-registration>.

Certifications

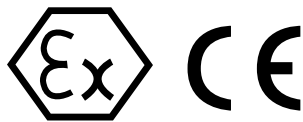

CONTENTS

SECTION 1: Precautions – Read First! 4

SECTION 2: Wilden Pump Designation System 5

SECTION 3: How It Works 6

SECTION 4: Dimensional Drawings 7

SECTION 5: Performance 9

 PS400 ALLOY C Rubber-Fitted 9

 PS400 ALLOY C Full-Stroke PTFE-Fitted 9

 PS800 ALLOY C Rubber-Fitted 10

 PS800 ALLOY C Full-Stroke PTFE-Fitted 10

 PS1500 ALLOY C Rubber-Fitted 11

 PS1500 ALLOY C Full-Stroke PTFE-Fitted 11

 Suction Lift Capability 12

SECTION 6: Suggested Installation, Operation, Maintenance, and Troubleshooting 14

SECTION 7: Disassembly/Reassembly 17

 Pump Disassembly 17

 Air Valve/Center Section Disassembly 20

 Single-Point Exhaust 23


 Reassembly Hints and Tips 23


SECTION 8: Exploded View and Parts List 25


SECTION 9: Elastomer Options 31

SECTION 1

PRECAUTIONS – READ FIRST!

 **WARNING:** Always wear safety glasses when operating a pump to avoid eye injury. If diaphragm rupture occurs, material being pumped may be forced out of the air exhaust.

 **CAUTION:** Do not apply compressed air to the exhaust port – pump will not function.


 **CAUTION:** Do not over-lubricate air supply– excess lubrication will reduce pump performance. Pump is pre-lubed.


 **TEMPERATURE LIMITS:**


Acetal	-29°C to 82°C	-20°F to 180°F
Buna-N	-12°C to 82°C	10°F to 180°F
Bunastat™	-40°C to 130°C	-40°F to 266°F
Geolast®	-40°C to 82°C	-40°F to 180°F
Neoprene	-18°C to 93°C	0°F to 200°F
Nordel EPDM	-51°C to 138°C	-60°F to 280°F
Nylon	-18°C to 93°C	0°F to 200°F
PFA	-7°C to 107°C	45°F to 225°F
Polypropylene	0°C to 79°C	32°F to 175°F
Polyurethane	-12°C to 66°C	10°F to 150°F
PVDF	-12°C to 107°C	10°F to 225°F
Saniflex™	-29°C to 104°C	-20°F to 220°F
SIPD PTFE with EPDM-backed	4°C to 137°C	40°F to 280°F
SIPD PTFE with Neoprene-backed	4°C to 93°C	40°F to 200°F
PTFE*	4°C to 104°C	40°F to 220°F
FKM	-40°C to 177°C	-40°F to 350°F
Wil-Flex®	-40°C to 107°C	-40°F to 225°F


*4°C to 149°C (40°F to 300°F) - 13 mm (1/2") and 25 mm (1") models only.


NOTE: Not all materials are available for all models. See "Wilden Pump Designation System" for material options for your pump.


 **CAUTION:** When choosing pump materials, be sure to check the temperature limits for all wetted components. Example: FKM has a maximum limit of 177°C (350°F), but polypropylene has a maximum limit of only 79°C (175°F).



 **CAUTION:** Maximum temperature limits are based on mechanical stress only. Certain chemicals will reduce maximum safe operating temperatures significantly. Consult the Chemical Resistance Guide for chemical compatibility and temperature limits.


 **WARNING:** Prevent static sparking – if static sparking occurs, fire or explosion could result. Pump, valves and containers must be grounded to a proper grounding point when handling flammable fluids and whenever discharge of static electricity is a hazard.


 **CAUTION:** All Wilden pumps are capable of passing solids. Use a strainer on the pump intake to ensure that the pump's rated solids capacity is not exceeded.


 **CAUTION:** Do not exceed 8.6 bar (125 psig) air supply pressure.

 **CAUTION:** Do not exceed 82°C (180°F) air inlet temperature for all models.


 **CAUTION:** The process fluid and cleaning fluids must be compatible chemically with all wetted pump components.
 **CAUTION:** Before attempting any maintenance or repair, disconnect the compressed air line to the pump and allow all air pressure to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.


 **CAUTION:** Thoroughly flush pumps before installing them into process lines. Clean and/or sanitize FDA- and USDA- approved pumps before using them.


 **CAUTION:** Before attaching the air line to the pump, blow out the air line for 10 to 20 seconds to make sure all pipeline debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.


 **CAUTION:** Pro-Flo pumps cannot be used in submersible applications. Pro-Flo SHIFT is available in both single-point exhaust (submersible) and standard (non-submersible) options. Do not use standard Pro-Flo SHIFT models in submersible applications.


 **CAUTION:** Before installation, tighten all hardware.

 **NOTE:** Materials of construction and elastomer material may influence suction lift parameters. Please refer to "Performance" for specifics.

 **NOTE:** When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure tight fit. (See "Maximum Torque Specifications").


 **NOTE:** Some PTFE-fitted pumps come standard from the factory with expanded PTFE gaskets installed in the diaphragm bead of the liquid chamber. PTFE gaskets cannot be re-used.

 **NOTE:** In the event of a power failure, close the shut-off valve if you do not want the pump to restart when the power returns.

 **WARNING:** This product can expose you to chemicals including Nickel, Chromium, Cadmium, or Cobalt, which are known to the State of California to cause cancer and/or birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

SECTION 2

WILDEN PUMP DESIGNATION SYSTEM

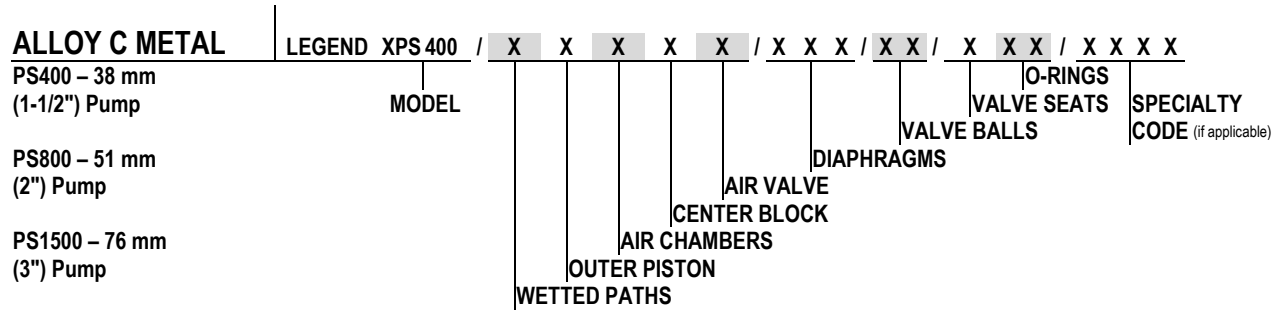

MATERIAL CODES

MODEL XPS400 = PRO-FLO® SHIFT ATEX XPS800 = PRO-FLO® SHIFT ATEX XPS1500 = PRO-FLO® SHIFT ATEX	AIR VALVE A = ALUMINUM N = NICKEL-PLATED S = STAINLESS STEEL	VALVE BALLS TF = PTFE (WHITE) VT = FKM (WHITE DOT)
WETTED PATH H = ALLOY C	DIAPHRAGMS TSS = FULL-STROKE PTFE W/SANIFLEX™ BACK-UP TWS = FULL-STROKE PTFE W/WIL-FLEX® BACK-UP VTS = FKM (WHITE DOT)	VALVE SEAT H = ALLOY C VT = FKM (WHITE DOT)
OUTER PISTON H = ALLOY C		VALVE SEAT O-RING TF = PTFE
AIR CHAMBERS A = ALUMINUM N = NICKEL-PLATED S = STAINLESS STEEL		
CENTER BLOCK A = ALUMINUM N = NICKEL-PLATED S = STAINLESS STEEL		

SPECIALTY CODES

0100 Wil-Gard 110V	0320 Single-Point Exhaust	0504 DIN flange
0102 Wil-Gard sensor wires ONLY	0480 Pump Cycle Monitor (sensor & wires)	
0103 Wil-Gard 220V	0483 Pump Cycle Monitor (module, sensor & wires)	
	0485 Pump Cycle Monitor (module, sensor & wires), DIN flange	

- ! **NOTE:** Most elastomeric materials use colored dots for identification
- ! **NOTE:** Not all models are available with all material options

SECTION 3

HOW IT WORKS – AIR-OPERATED DOUBLE-DIAPHRAGM PUMP

The Wilden diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

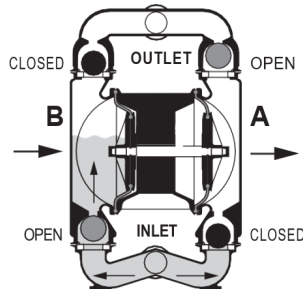


FIGURE 1 The air valve directs pressurized air to the back side of diaphragm A. The compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid; a balanced load removes mechanical stress from the diaphragm. The compressed air moves the diaphragm away from the center of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to atmosphere through the exhaust port of the pump. The movement of diaphragm B toward the center of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).

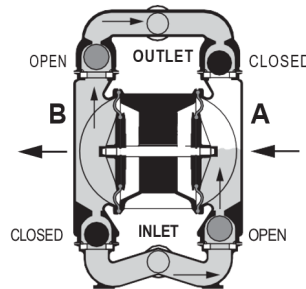


FIGURE 2 When the pressurized diaphragm, diaphragm A, reaches the limit of its discharge stroke, the air valve redirects pressurized air to the back side of diaphragm B. The pressurized air forces diaphragm B away from the center while pulling diaphragm A to the center. Diaphragm B is now on its discharge stroke. Diaphragm B forces the inlet valve ball onto its seat due to the hydraulic forces developed in the liquid chamber and manifold of the pump. These same hydraulic forces lift the discharge valve ball off its seat, while the opposite discharge valve ball is forced onto its seat, forcing fluid to flow through the pump discharge. The movement of diaphragm A toward the center of the pump creates a vacuum within liquid chamber A. Atmospheric pressure forces fluid into the inlet manifold of the pump. The inlet valve ball is forced off its seat allowing the fluid being pumped to fill the liquid chamber.


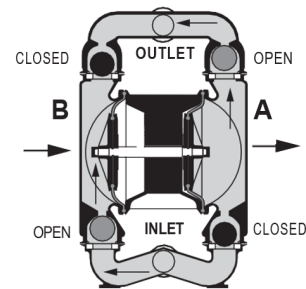


FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.

HOW IT WORKS – AIR DISTRIBUTION SYSTEM

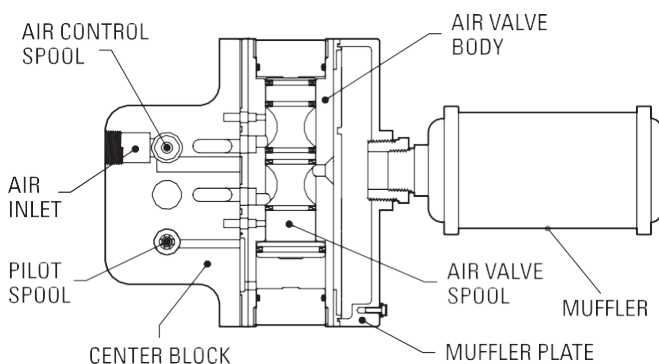


The heart of the patented Pro-Flo® SHIFT Air Distribution System (ADS) is the air valve assembly. The air valve design incorporates an unbalanced spool with the small end of the spool being pressurized continuously while the large end of the spool is alternately pressurized, then exhausted to move the spool. The air valve spool directs pressurized air to one chamber while exhausting the other. The air forces the main shaft/diaphragm assembly to move to one side – discharging liquid on that side and pulling liquid in on the other side. When the shaft reaches the end of the stroke, the inner piston actuates the pilot spool, which controls the air to the large end of the air valve spool. The repositioning of the air valve spool routes the air to the other air chamber. The air control spool allows air to flow freely into the air chamber for the majority of each pump stroke, but it significantly restricts the flow of air into the air chamber when activated by the inner piston near the end of each stroke.

SECTION 4

DIMENSIONAL DRAWING

PS400 ALLOY C

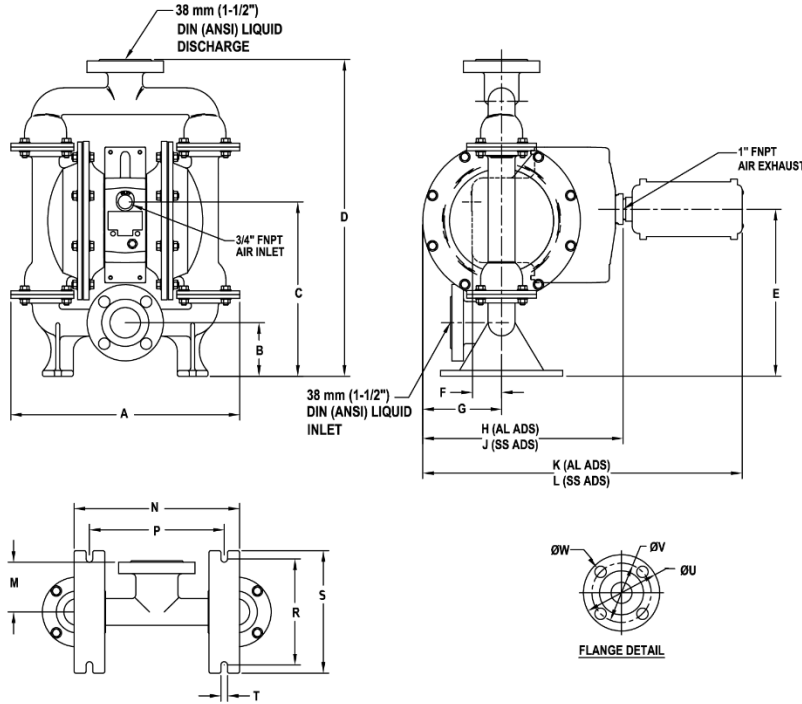


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	381	15.0
B	89	3.5
C	289	11.4
D	530	20.8
E	277	10.9
F	48	1.9
G	131	5.2
H	333	13.1
J	328	12.9
K	530	20.9
L	525	20.7
M	83	3.3
N	275	10.8
P	224	8.8
R	176	7.0
S	203	8.0
T	11	0.4
	DIN DN 40	ANSI 150 #
U	150 DIA.	5.0 DIA.
V	110 DIA.	3.8 DIA.
W	18 DIA.	0.6 DIA.

LW0230 REV. D

PS800 ALLOY C

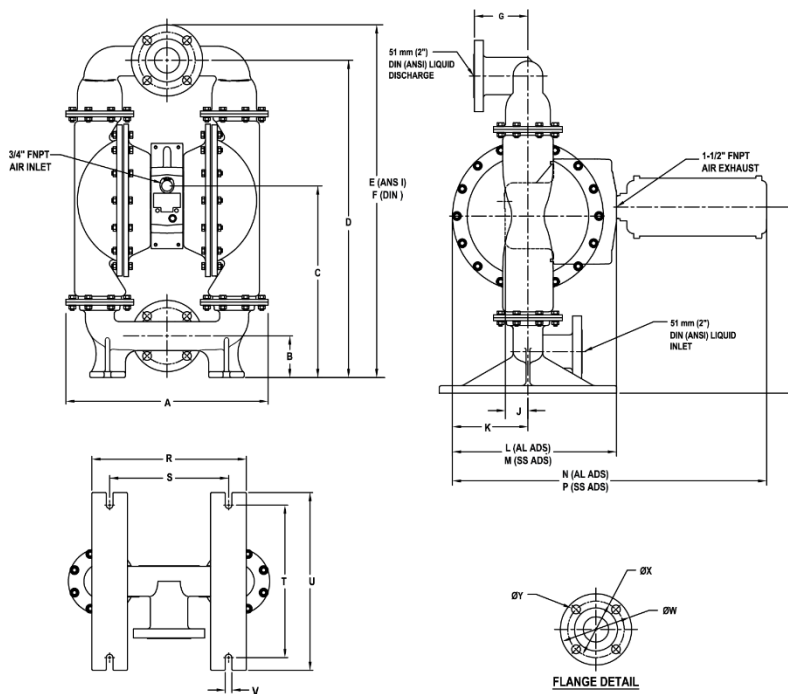


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	432	17.0
B	89	3.5
C	407	16.1
D	678	26.7
E	754	29.7
F	760	29.9
G	117	4.6
H	398	15.7
J	48	1.9
K	161	6.4
L	350	13.8
M	344	13.6
N	671	26.4
P	664	26.2
R	330	13.0
S	254	10.0
T	325	12.8
U	378	14.9
V	15	0.6
	DIN DN 40	ANSI 150 #
W	165 DIA.	6.0 DIA.
X	125 DIA.	4.8 DIA.
Y	18 DIA.	0.8 DIA.

LW0237 REV. D

DIMENSIONAL DRAWING

PS1500 ALLOY C

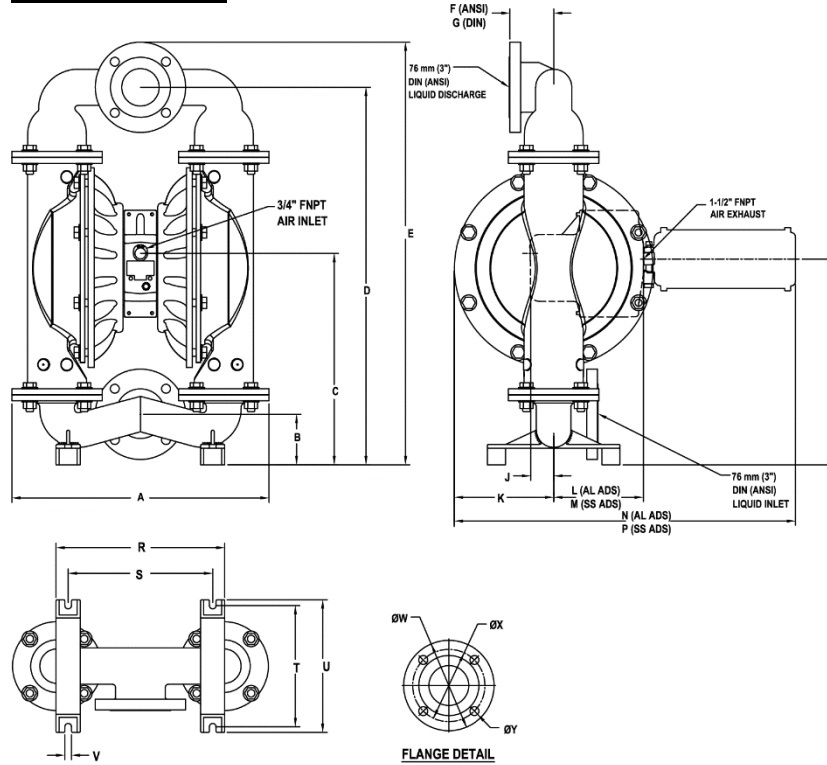

DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	541	21.3
B	107	4.2
C	445	17.5
D	795	31.3
E	892	35.1
F	89	3.5
G	91	3.6
H	433	17.1
J	48	1.9
K	211	8.3
L	189	7.4
M	184	7.3
N	719	28.3
P	714	28.1
R	356	14.0
S	305	12.0
T	257	10.1
U	279	11.0
V	15	0.6
	DIN DN 40	ANSI 150 #
W	200 DIA.	7.5 DIA.
X	160 DIA.	6.0 DIA.
Y	18 DIA.	0.8 DIA.

LW0257 REV. D

SECTION 5


PERFORMANCE

PS400 ALLOY C RUBBER-FITTED

Ship Weight.....Alloy C 45 kg (100 lb)
Air Inlet.....3/4"
Inlet.....38 mm (1-1/2")
Outlet.....38 mm (1-1/2")
Suction Lift.....6.7 m Dry (22.1')
8.6 m Wet (28.4')
Disp. per Stroke¹.....1.0 L (0.26 gal)
Max. Flow Rate.....271 lpm (72 gpm)
Max. Size Solids.....4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

Example: To pump 197 lpm (52 gpm) against a discharge head of 1.4 bar (20 psig) requires 4.1 bar (60 psig) and 54 Nm³/h (32 scfm) air consumption.

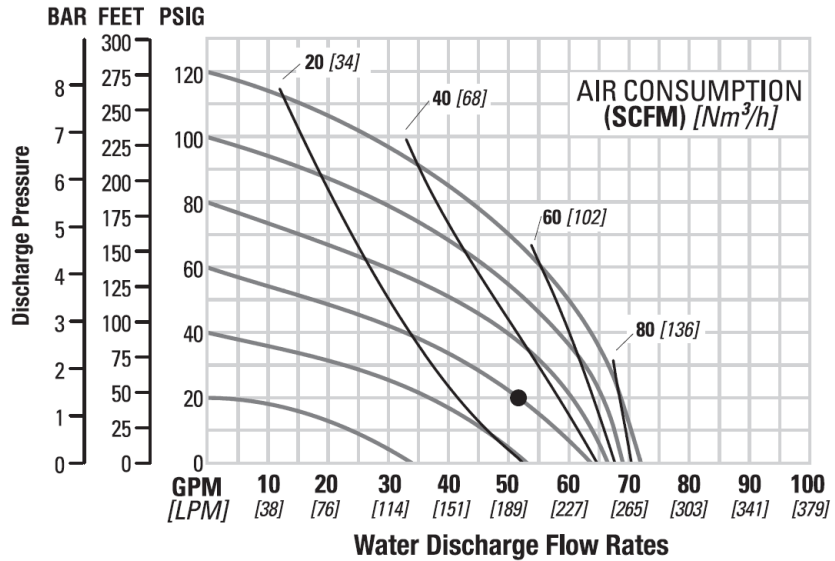

Flow rates indicated on chart were determined by pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump's performance curve.


Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

PS400 ALLOY C FULL-STROKE PTFE-FITTED

Ship Weight.....Alloy C 45 kg (100 lb)
Air Inlet.....3/4"
Inlet.....38 mm (1-1/2")
Outlet.....38 mm (1-1/2")
Suction Lift.....6.7 m Dry (22.1')
8.6 m Wet (28.4')
Disp. per Stroke¹.....0.9 L (0.25 gal)
Max. Flow Rate.....348 lpm (92 gpm)
Max. Size Solids.....4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

Example: To pump 238 lpm (63 gpm) against a discharge head of 2.1 bar (30 psig) requires 5.5 bar (80 psig) and 78 Nm³/h (46 scfm) air consumption.

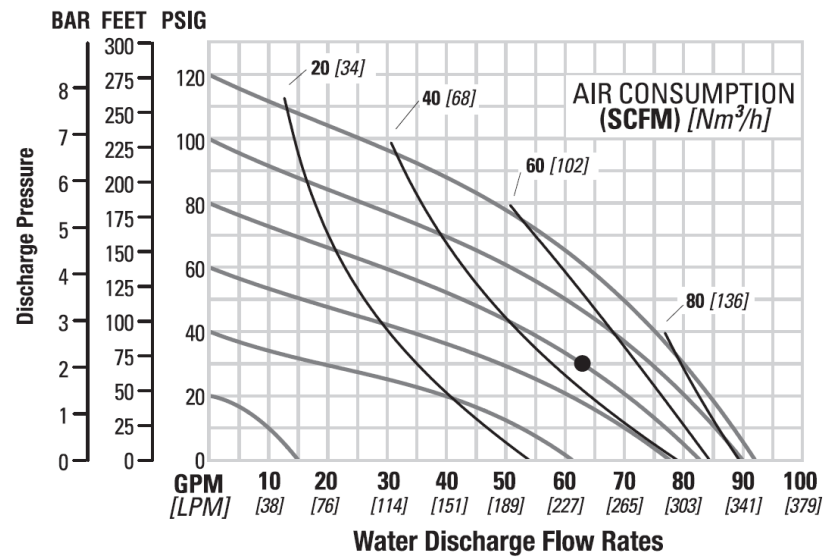


Flow rates indicated on chart were determined by pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump's performance curve.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

SUCTION LIFT CAPABILITY


**PS400 ALLOY C
 SUCTION LIFT
 CAPABILITY**

Suction-lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables that can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

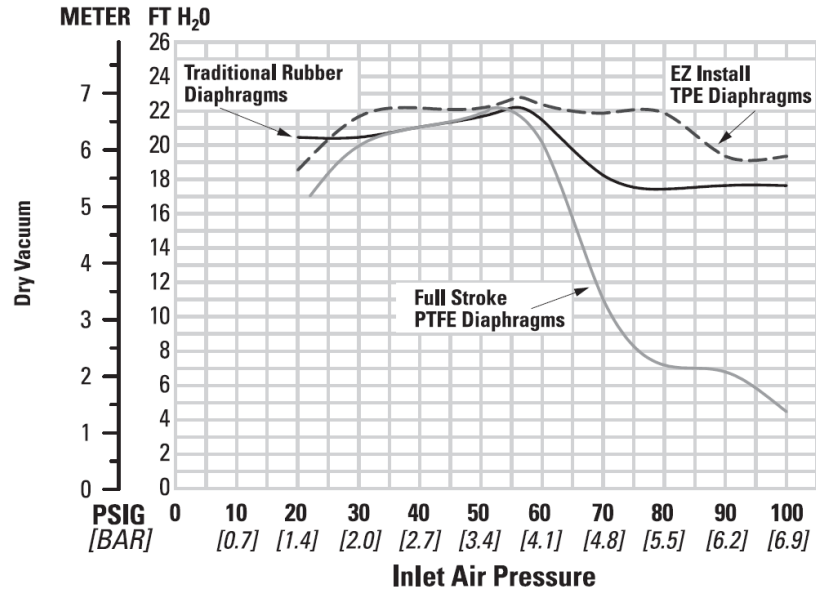

**PS800 ALLOY C
 SUCTION LIFT
 CAPABILITY**


Suction-lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables that can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

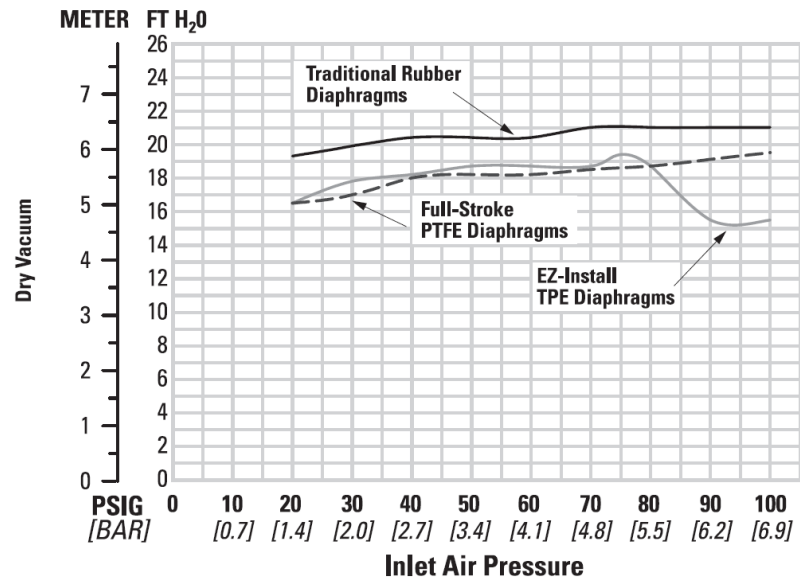

SUCTION LIFT CAPABILITY

**PS1500 ALLOY C
SUCTION LIFT
CAPABILITY**

Suction-lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables that can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

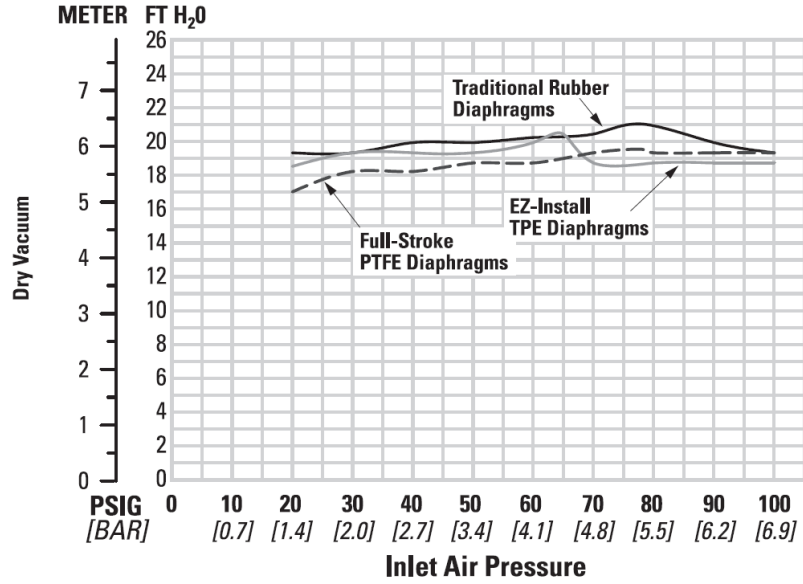


SECTION 6

SUGGESTED INSTALLATION, OPERATION, MAINTENANCE AND TROUBLESHOOTING

Wilden pumps are designed to meet the performance requirements of even the most demanding pumping applications. They have been designed and manufactured to the highest standards and are available in a variety of liquid path materials to meet your chemical resistance needs. Refer to "Performance" for an in-depth analysis of the performance characteristics of your pump. Wilden offers the widest variety of elastomer options in the industry to satisfy temperature, chemical compatibility, abrasion resistance and flex concerns.

The suction pipe size should be at least equal to or larger than the diameter size of the suction inlet on your Wilden pump. The suction hose must be a non-collapsible, reinforced type because these pumps are capable of pulling a high vacuum. Discharge piping should also be equal to or larger than the diameter of the pump discharge, which will help reduce friction losses.

 **CAUTION:** All fittings and connections must be airtight. Otherwise, pump suction capability will be reduced or lost.

Months of careful planning, study and selection efforts can result in unsatisfactory pump performance if installation details are left to chance. You can avoid premature failure and long-term dissatisfaction by exercising reasonable care throughout the installation process.

Location

Noise, safety and other logistical factors usually dictate where equipment will be situated on the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for additional pumps. Within the framework of these and other existing conditions, locate every pump in such a way that the following six key factors are balanced against each other to maximum advantage:

- **Access:** First, the location should be accessible. If it's easy to reach the pump, maintenance personnel will be able to perform routine inspections and adjustments more easily. If major repairs become necessary, ease of access can play a key role in speeding the repair process and reducing total downtime.
- **Air Supply:** Every pump location should have an air line large enough to supply the volume of air necessary to achieve the desired pumping rate. For best results, the pumps should use a 5µ (micron) air filter, needle valve and regulator. The use of an air filter before the pump will ensure that the majority of any pipeline contaminants will be eliminated.
- **Solenoid Operation:** When operation is controlled by a solenoid valve in the air line, three-way valves should be used. This valve allows trapped air between the valve and the pump to bleed off, which improves pump performance. You can estimate pumping volume by counting the number of strokes per minute, and then multiplying that figure by the displacement per stroke.
- **Muffler:** Using the standard Wilden muffler, sound levels are reduced below OSHA specifications. You can use other mufflers to reduce sound levels farther, but they usually reduce pump performance.
- **Elevation:** Selecting a site that is well within the pump's dynamic lift capability will assure that loss-of-prime issues will


be eliminated. In addition, pump efficiency can be adversely affected if proper attention is not given to site location.

- **Piping:** Final determination of the pump site should not be made until the piping challenges of each possible location have been evaluated. The impact of current and future installations should be considered ahead of time to make sure that inadvertent restrictions are not created for any remaining sites.

The best choice possible will be a site involving the shortest and straightest hook-up of suction and discharge piping. Unnecessary elbows, bends and fittings should be avoided. Pipe sizes should be selected to keep friction losses within practical limits. All piping should be supported independently of the pump. In addition, the piping should be aligned to avoid placing stress on the pump fittings.

Flexible hose can be installed to aid in absorbing the forces created by the natural reciprocating action of the pump. If the pump is to be bolted down to a solid location, a mounting pad placed between the pump and the foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration. If quick-closing valves are installed at any point in the discharge system, or if pulsation within a system becomes a problem, a surge suppressor (SD Equalizer) should be installed to protect the pump, piping and gauges from surges and water hammer.

If the pump is to be used in a self-priming application, make sure that all connections are airtight and that the suction lift is within the model's ability.


 **NOTE:** Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to "Performance" for specifics.


When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to permit closing of the line for pump service.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.5–0.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction is 0.7 bar (10 psig) and higher.


Single-Point Exhaust

Pro-Flo SHIFT pumps can be used for submersible applications when using the Pro-Flo SHIFT's single-point exhaust.

 **CAUTION:** All Wilden pumps are capable of passing solids. Use a strainer on the pump intake to ensure that the pump's rated solids capacity is not exceeded.

 **CAUTION:** Do not exceed 8.6 bar (125 psig) air supply pressure.

**SUGGESTED INSTALLATION, OPERATION, MAINTENANCE
AND TROUBLESHOOTING**

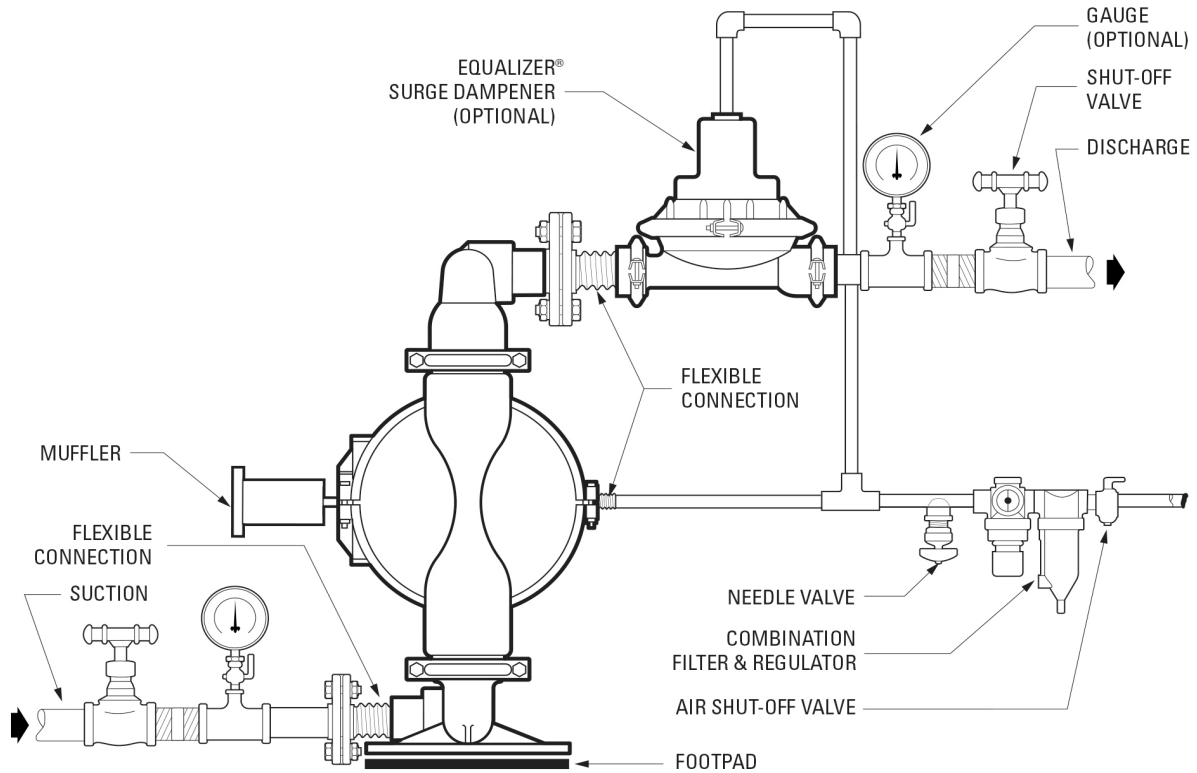

! **NOTE:** In the event of a power failure, close the shut-off valve if you do not want the pump to restart when the power returns.

Air-Operated Pumps: To stop the pump from operating in an emergency, simply close the shut-off valve (user-supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut-off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency.

Operation

The Pro-Flo SHIF T pumps are pre-lubricated and do not require in-line lubrication. Additional lubrication will not damage the pump. However, if the pump is heavily lubricated by an external source, the pump's internal lubrication maybe washed away. If the pump is then moved to a nonlubricated location, it may need to be disassembled and re-lubricated as described in "Disassembly/ Reassembly".

Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump. An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate also can be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss, which reduces flow rate. (See "Performance") This is useful when the need exists

to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop. No bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a "deadhead" situation and can be restarted by reducing the fluid discharge pressure or increasing the air inlet pressure. Wilden Pro-Flo SHIF T pumps run solely on compressed air and do not generate heat. Therefore, your process fluid temperature will not be affected.

Maintenance and Inspections

Because each application is unique, maintenance schedules maybe different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation.

SUGGESTED INSTALLATION, OPERATION, MAINTENANCE AND TROUBLESHOOTING

Troubleshooting

Pump will not run or runs slowly.

1. Remove plug from pilot spool exhaust.
2. Ensure that the air inlet pressure is at least 0.4 bar (5 psig) above startup pressure and that the differential pressure (the difference between air inlet and liquid discharge pressures) is not less than 0.7 bar (10 psig).
3. Check air inlet filter for debris (see "Suggested Installation, Operation, Maintenance and Troubleshooting").
4. Check for extreme air leakage (blow by) that would indicate worn seals/bores in the air valve, pilot spool and main shaft.
5. Disassemble the pump and check for obstructions in the air passageways or objects that would obstruct the movement of internal parts.
6. Check for sticking ball check valves.
 - a. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seals with proper elastomers.
 - b. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.
7. Check for any broken inner piston that would cause the air valve spool to be unable to shift.

Pump runs, but little or no product flows.

1. Check for pump cavitation. Slow pump speed down to allow thick material to flow into liquid chambers.
2. Verify that vacuum required to lift liquid is not greater than the vapor pressure of the material being pumped (cavitation).
3. Check for sticking ball check valves.
 - a. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seals with proper elastomers.
 - b. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.

Pump air valve freezes.

1. Check for excessive moisture in the compressed air.
 - a. Either install a dryer or a hot air generator for compressed air.
 - b. Alternatively, you may use coalescing filter to remove the water from the compressed air in some applications.

Air bubbles in pump discharge.

1. Check for a ruptured diaphragm.
2. Check tightness of outer pistons (see "Disassembly/Reassembly").
3. Check tightness of fasteners and integrity of O-rings and seals, especially at intake manifold.
4. Ensure pipe connections are airtight.

Product comes out air exhaust.

1. Check for a diaphragm rupture.
2. Check the tightness of the outer pistons to the shaft.

SECTION 7

DISASSEMBLY / REASSEMBLY

PUMP DISASSEMBLY

Tools Required:

- Appropriate-sized Wrench
- Adjustable Wrench
- Vise equipped with soft jaws (such as plywood, plastic or other suitable material)




CAUTION: Before attempting any maintenance or repair, disconnect the compressed air line to the pump and allow all air pressure to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.



NOTE: Your specific pump model may vary from the configuration shown; however, pump disassembly procedure will be the same.




NOTE: Replace worn parts with genuine Wilden parts for reliable performance.

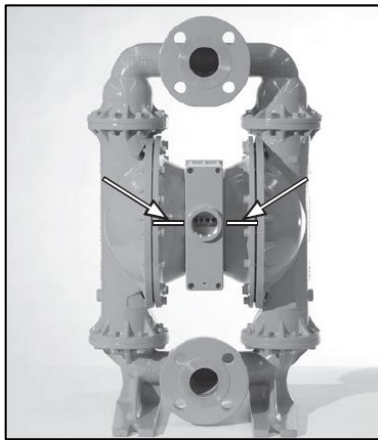


Step 1

Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.

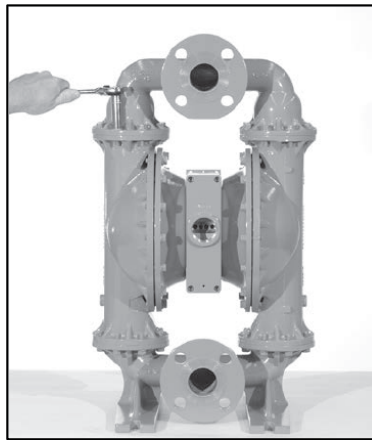

Step 2


Using the appropriate-sized wrench, loosen the discharge manifold from the liquid chambers.

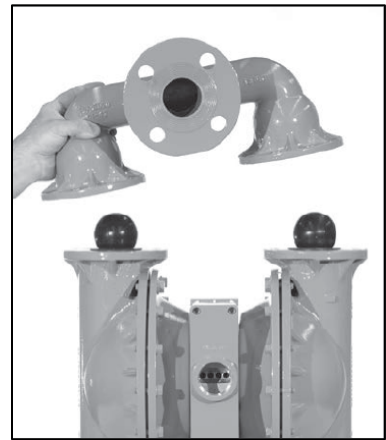

Step 3


Lift the discharge manifold to expose discharge valve balls and valve seats. Inspect ball cage area of manifold for excessive wear or damage.

DISASSEMBLY / REASSEMBLY

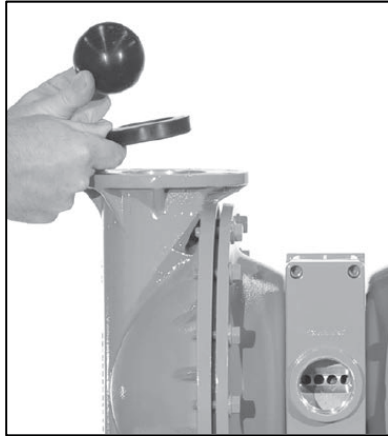

Step 4


Remove the discharge valve balls and valve seats from the liquid chambers and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance.

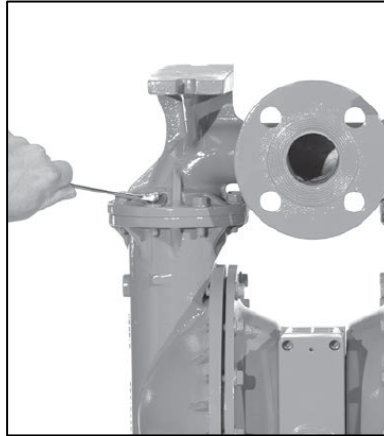

Step 5


Using the appropriate-sized wrench, loosen the inlet manifold from the liquid chambers.

NOTE: Inverting the pump will facilitate removal of inlet manifold.

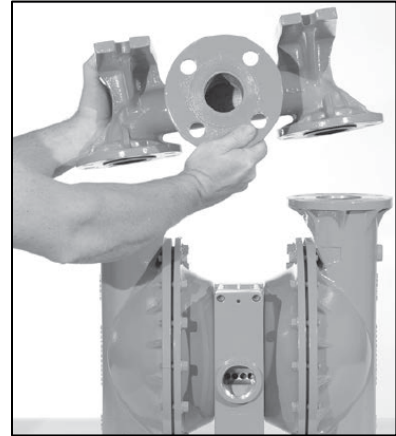


Step 6

Remove the inlet manifold to expose the valve balls and valve seats. Inspect ball cage area of manifold for excessive wear or damage.

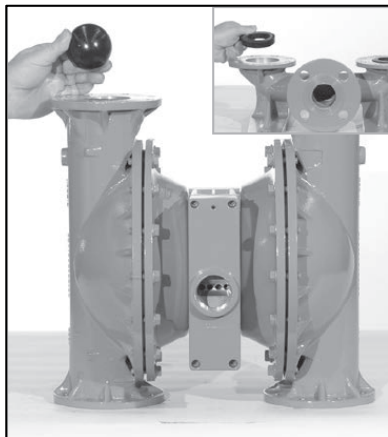

Step 7

Remove the inlet valve balls and valve seats from the inlet manifold and liquid chambers and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance.

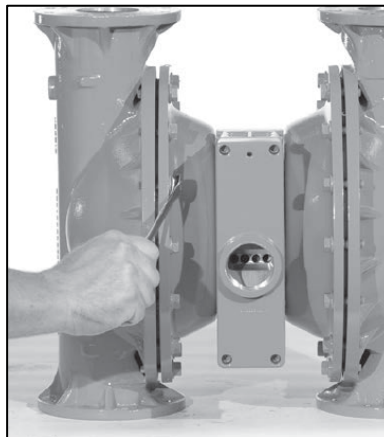

Step 8


Using the appropriate-sized wrench, remove the liquid chamber from the center section.



Step 9

The liquid chamber should be removed to expose the diaphragm and outer piston using an adjustable wrench. Remove the diaphragm assembly from the center section. Repeat for opposite side.

DISASSEMBLY / REASSEMBLY

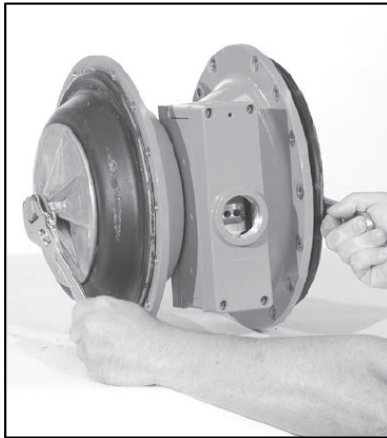

Step 10

Using two adjustable wrenches, turn each diaphragm in a counterclockwise direction to loosen the outer pistons.



Step 11

Inspect the diaphragm assembly for wear, damage or chemical attack. Replace any damaged components with genuine Wilden parts for reliable performance.




Step 12

Inner piston hardware location and fastener type may vary. Use an appropriately-sized socket wrench to disassemble the diaphragm assembly if replacement is necessary.



Step 13

To remove the diaphragm assembly from shaft, secure shaft with soft jaws (aluminum, plastic, or plywood) to ensure the shaft is not damaged. Using an adjustable wrench, remove the diaphragm assembly from the shaft.

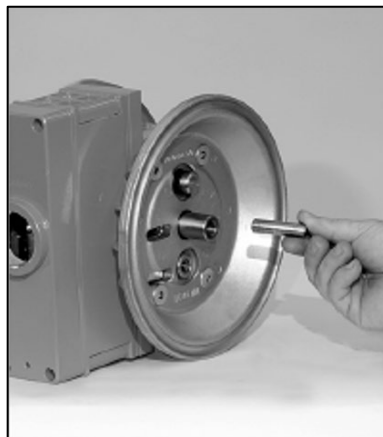

Step 14

Remove outer piston and stud if equipped. Inspect for wear and replace if necessary.

DISASSEMBLY / REASSEMBLY

AIR VALVE / CENTER SECTION DISASSEMBLY

Tools Required:

- 3/16" Hex-Head Wrench
- 1/4" Hex-Head Wrench
- Snap-Ring Pliers
- O-Ring Pick



CAUTION: Before attempting any maintenance or repair, disconnect the compressed air line to the pump and allow all air pressure to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.



NOTE: Replace worn parts with genuine Wilden parts for reliable performance.



NOTE: For pump Air Valves fitted with Pump Cycle Monitor (PCM) units, if the Set Screw is removed from the Air Valve Spool and/or the Sensor is removed from the Air Valve End Cap, refer to PCMI EOM WIL-19130-E for reassembly instructions.



Step 1

Using a pair of snap-ring pliers, remove the snap ring from the pilot sleeve.




Step 2

Using an O-ring pick, remove the O-ring from modulator spool.



Step 3

Using the appropriate-sized wrench, loosen and remove the fasteners that attach the air chamber to the center section.

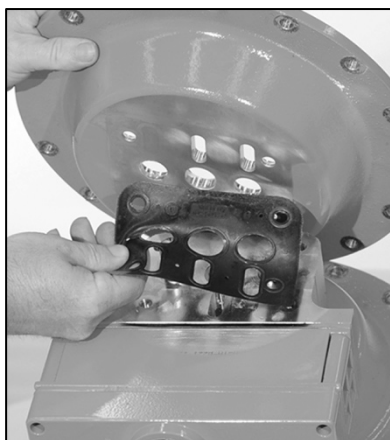


Step 4

Lift the air chamber away from the center section and remove the center block gasket. Replace gasket, if necessary.



Step 5


Turn the assembly over and remove the pilot spool sleeve from the center section.

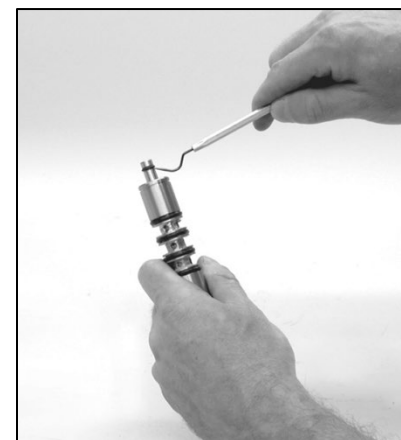

Step 6

Using an O-ring pick, gently remove the O-ring from the opposite side of the dimpled end of the pilot spool.

DISASSEMBLY / REASSEMBLY

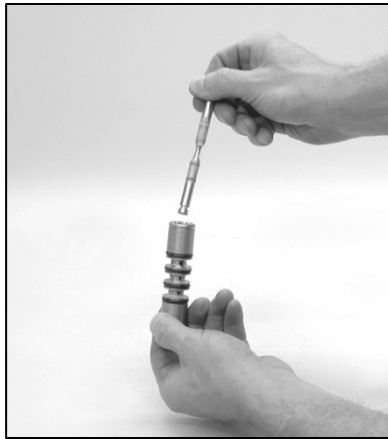

Step 7

Gently remove the pilot spool from the sleeve and inspect for nicks, wear or damage. Replace the pilot spool assembly or sleeve O-rings, if necessary. During reassembly, never insert the dimpled end of the pilot spool first. This will damage the single urethane O-ring bypassing it over the ports in the pilot sleeve.

NOTE: Do not remove seals from the assembly. Seals are not sold separately.




Step 8

Remove the modulator spool from the center section. Check for wear to the spool or O-rings and replace, if necessary.




Step 9

Using the appropriate-sized wrench, loosen the fasteners and lift away remaining air chamber and center block gasket from center section. Replace gasket if necessary.

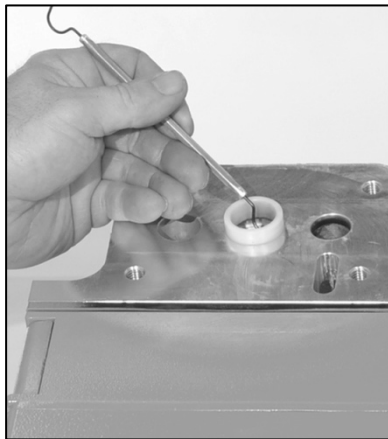


Step 10

Using an O-ring pick, remove the two (2) shaft bushings from center block. Inspect and replace if necessary. Using an O-ring pick, gently remove the two (2) Glyd™ rings from the center block. Inspect and replace if necessary.

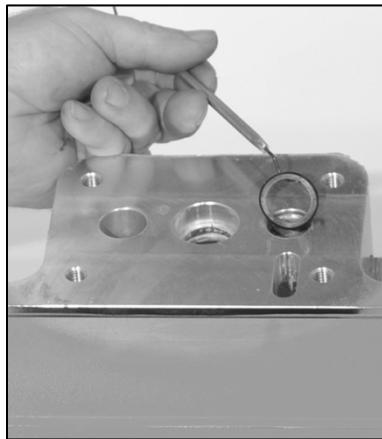

Step 11


Using an O-ring pick, remove the two (2) Glyd™ rings from modulator spool bore. Inspect and replace if necessary.

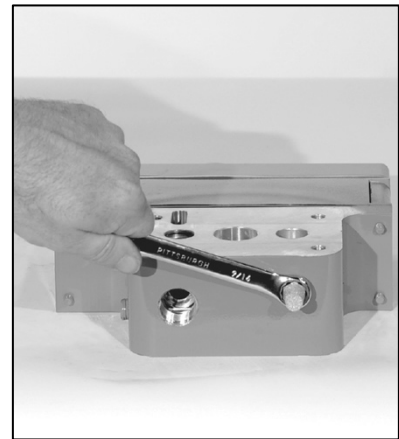

Step 12

Using an appropriate-sized wrench, remove the pilot exhaust muffler. Inspect for damage or contamination and replace if necessary.

DISASSEMBLY / REASSEMBLY

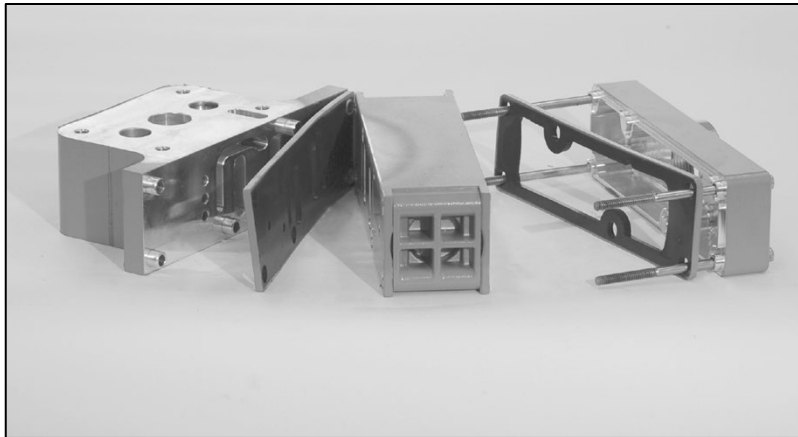


Step 13

Loosen and remove the four (4) air valve bolts from the center section assembly.

Lift the muffer plate and muffer plate gasket away from the center block. Inspect for wear and replace, if necessary.


Lift the air valve assembly and remove the air valve gasket. Inspect the gasket and replace, if necessary.

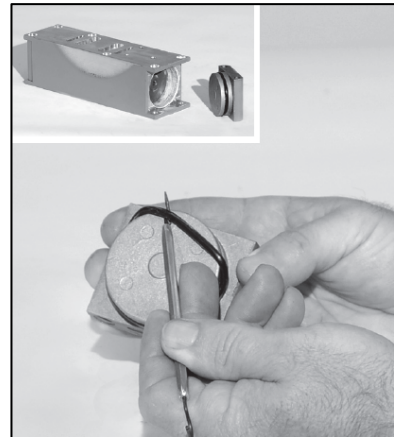

Step 14

Remove the air valve end cap to expose the air valve spool by lifting up on the end cap. Inspect the O-ring on the end cap using an O-ring pick. Replace the O-ring(s), if necessary.

NOTE: The Pro-Flo SHIFT air valve incorporates an end cap at both ends of the air valve.

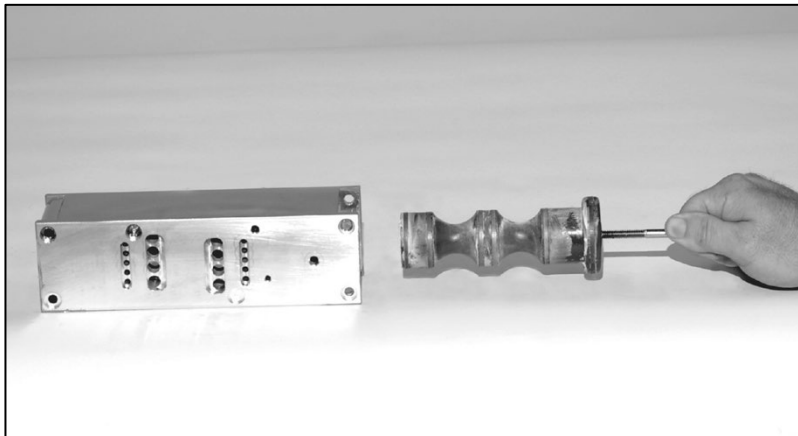


Step 15

Remove the air valve spool from the air valve body by threading one air valve bolt into the end of the air valve spool and gently sliding the spool out of the air valve body. Inspect seals for signs of wear and replace the entire air valve assembly, if necessary. Re-insert the spool immediately into the air valve body after inspection because the seals expand and cannot be reinserted after a length of time.

NOTE: Do not remove seals from the assembly. Seals are not sold separately.


DISASSEMBLY / REASSEMBLY

SINGLE-POINT EXHAUST

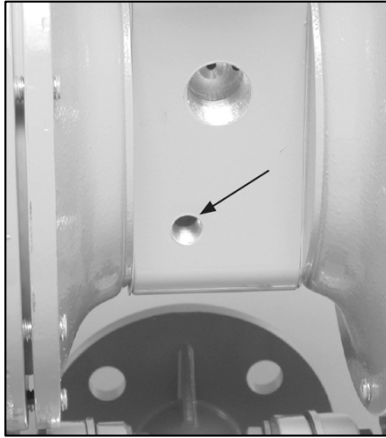

Step 1

Remove the pilot exhaust muffler in the pilot bleed port located at the front of the center block. Install 1/4" NPT pipe plug (00-7010-08) into the bleed port.

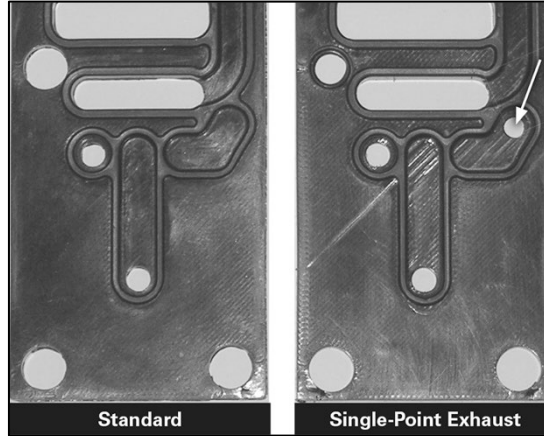

Step 2

Optional: Install a single-point exhaust gasket (04-2638-56). The single-point air valve gasket can be purchased as a spare part or included with the purchase of a new Pro-Flo SHIFT pump.

REASSEMBLY HINTS AND TIPS

Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement.

To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted path. The applicable torque specifications are on this page.

The following tips will assist in the assembly process:

- Lubricate the air valve bore, center section shaft and pilot spool bore with NLGI grade 2 white EP bearing grease or equivalent.
- Clean the inside of the center section shaft bore to ensure no damage is done to new shaft seals.
- A small amount of NLGI grade 2 white EP bearing grease can be applied to the muffler and air valve gaskets to lubricate gaskets during assembly.
- Make sure that the exhaust port on the muffler plate is centered between the two exhaust ports on the center section.
- Stainless bolts should be lubed to reduce the possibility of seizing during tightening.

Maximum Torque Specifications

Description	Torque
Air Valve (Aluminum, Stainless Steel)	13.6 N·m (120 in-lb)
Air Valve (Polypropylene)	6.2 N·m (55 in-lb)
Air Chamber/Center Block	27.1 N·m (20 ft-lb)
Outer Pistons, Rubber & PTFE (PS400)	54 N·m (40 ft-lb)
Liquid Chamber/Air Chamber, Stainless Steel (PS800)	54.2 N·m (40 ft-lb)
Outer Pistons, Rubber & PTFE, Excluding Stainless Steel Inner Pistons (PS800)	109 N·m (80 ft-lb)
Outer Pistons, Rubber & PTFE, Stainless Steel Inner Pistons (PS800)	119 N·m (88 ft-lb)
Inner Piston Ring (PS1500)	19 N·m (14 ft-lb)
Outer Pistons, Rubber & PTFE (PS1500)	136 N·m (100 ft-lb)

DISASSEMBLY / REASSEMBLY

SHAFT SEAL INSTALLATION

Pre-Installation

After all the old seals have been removed, the inside of the bushing should be cleaned to ensure no debris is left that may cause premature damage to the new seals.

Installation

1. To prevent damaging the inside surface of the new seal, wrap electrical tape around each leg of the needle-nose pliers. (Heat shrink tubing may also be used.)
2. With a new seal in hand, place the two legs of the needle-nose pliers inside the seal ring. (See Figure A.)
3. Open the pliers as wide as the seal diameter will allow, then with two fingers pull down on the top portion of the seal to form a kidney bean shape. (See Figure B.)
4. Lightly clamp the pliers together to hold the seal into the kidney shape. Be sure to pull the seal into as tight of a kidney shape as possible. This will allow the seal to travel down the bushing bore with greater ease.
5. With the seal clamped in the pliers, insert the seal into the bushing bore and position the bottom of the seal into the correct groove. When the bottom of the seal is seated in the groove, release the clamp pressure on the pliers. This will allow the seal to partially snap back to its original shape.
6. After removing the pliers, you will notice a slight bump in the seal shape. Before the seal can be resized properly, the bump in the seal should be removed as much as possible. This can be done with either a Phillips screwdriver or your finger. With the side of the screwdriver or your finger, apply light pressure to the peak of the bump. This pressure will cause the bump to be eliminated almost completely.
7. Lubricate the edge of the shaft with NLGI grade 2 white EP bearing grease.
8. Slowly insert the center shaft with a rotating motion. This will complete the resizing of the seal.
9. Repeat these steps for the remaining seals.

Tools

The following tools can be used to aid in the installation of the new seals:

- Needle-Nose Pliers
- Phillips Screwdriver
- Electrical Tape

Figure A


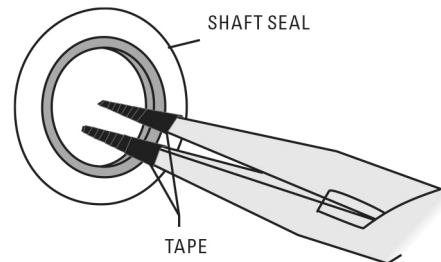



Figure B

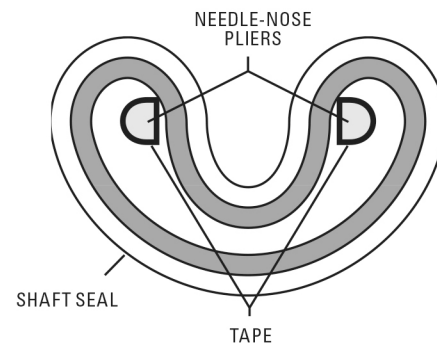

SECTION 8

EXPLODED VIEW AND PARTS LIST

PS400 ALLOY C

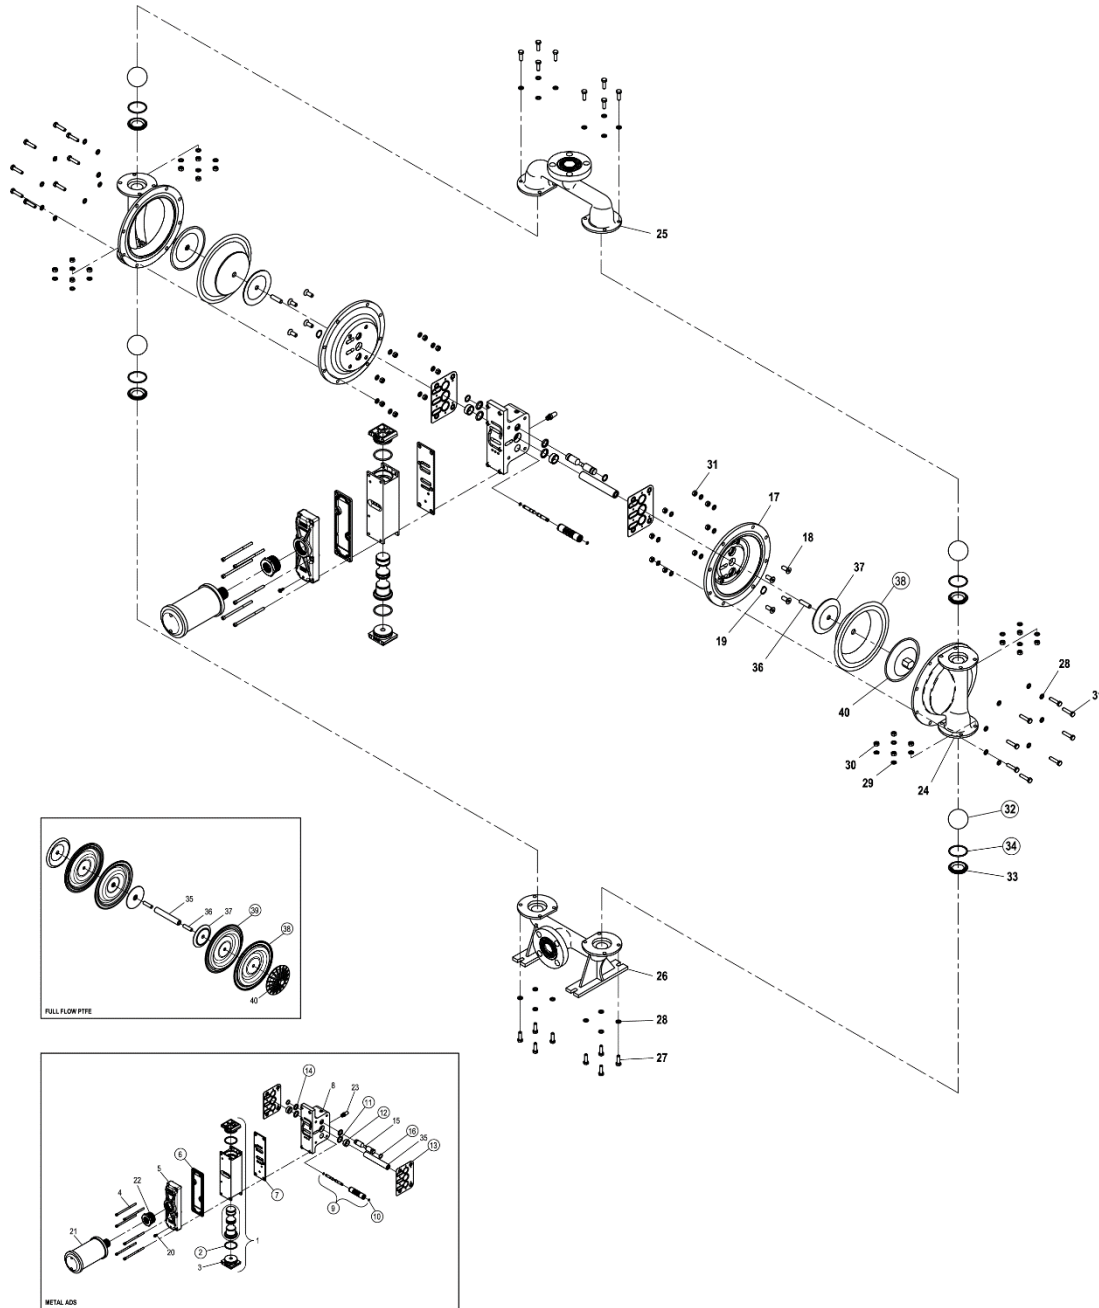

ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0502 REV. B

EXPLODED VIEW AND PARTS LIST

Item	Description	Qty.	Model Description	XPS400/HHAAA/	XPS400/HHSSS/
				P/N	P/N
Air Distribution Components					
1	Air Valve Assembly, Pro-Flo Shift™ ¹	1		04-2039-01	04-2039-03
2	O-Ring, End Cap (-225, Ø1.859" x Ø.139")	2		04-2390-52-700	
3	End Cap	2		04-2340-01	04-2340-03
4	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	6		01-6000-03	
5	Muffler Plate, Pro-Flo Shift™	1		04-3189-01	04-3189-03
6	Gasket, Muffler Plate, Pro-Flo Shift™	1		04-3509-56	
7	Gasket, Air Valve, Pro-Flo Shift™	1		04-2639-56	
8	Center Block Assembly, Pro-Flo Shift™ ²	1		04-3129-01	04-3129-03
9	Pilot Sleeve Assembly	1		04-3880-99	
10	Pilot Spool Retaining O-Ring (-009, Ø.208" x Ø.070")	2		04-2650-49-700	
11	Seal, Shaft	2		08-3210-55-225	
12	Bushing, Shaft	2		08-3306-13	
13	Gasket, Center Block Pro-Flo V™	2		04-3529-56	
14	Seal, Air Control Spool	2		04-3219-49	
15	Air Control Spool	1		04-3859-13	
16	Air Control Spool Retaining O-Ring (-114, Ø.612" x Ø.103")	2		04-3879-50	
17	Air Chamber, Pro-Flo V™	2		04-3696-01	04-3694-03
18	Screw, HSFHS (3/8"-16 x 1")	8		71-6250-08	71-6250-03
19	Retaining Ring	2		04-3890-03	
20	Grounding Screw, (10-32 x 1/2") Self Tapping	1		04-6345-08	
21	Muffler 1" MNPT	1		15-3510-99R	15-3513-99
22	Bushing, Reducer, 1-1/2" MNPT to 1" FNPT	2		04-6959-08	04-6959-03
23	Muffler, 1/4" MNPT	1		04-3240-07	
Wetted Path Components					
24	Liquid Chamber	2		04-5000-04-42	
25	Manifold, Discharge, ANSI	1		04-5020-04-42	
	Manifold, Discharge, DIN	1		04-5020-04-43	
26	Manifold, Inlet, ANSI	1		04-5080-04-42	
	Manifold, Inlet, DIN	1		04-5080-04-43	
27	Screw, HHC (5/16"-18 x 1")	16		08-6180-03-42	
28	Washer, Flat (Ø.328" x Ø.562" x .063")	32		08-6730-03-42	
29	Washer, Belleville (Ø.317" x Ø.625" x .047")	32		08-6810-03-42	
30	Hex Nut (5/16"-18)	32		08-6400-03	
31	Screw, HHC (5/16"-18 x 1-3/8")	16		08-6100-03	
Valve Balls/Valve Seats/Valve O-Rings					
32	Ball, Valve	4		*	
33	Seat, Valve	4		04-1121-04	
34	Valve Seat O-Ring, PTFE Fitted PTFE Fitted (-226, Ø.198" x Ø.139")	4		04-1200-55	
Full Stroke Rubber/TPE/PTFE Components					
35	Shaft	1		04-3800-03-700	
36	Shaft Stud	2		08-6150-08	
37	Piston, Inner	2		04-3700-01-700	
38	Diaphragm, Primary	2		*	
39	Diaphragm, Back-Up	2		*	
40	Piston, Outer	2		04-4550-04	

LW0503 Rev. B

* See elastomer chart - Section 9


¹ Air Valve Assembly includes items 2 and 3.

² Metal Center Block Assembly includes item 11, 12, and 14.

All boldface items are primary wear parts.

EXPLODED VIEW AND PARTS LIST

PS800 ALLOY C

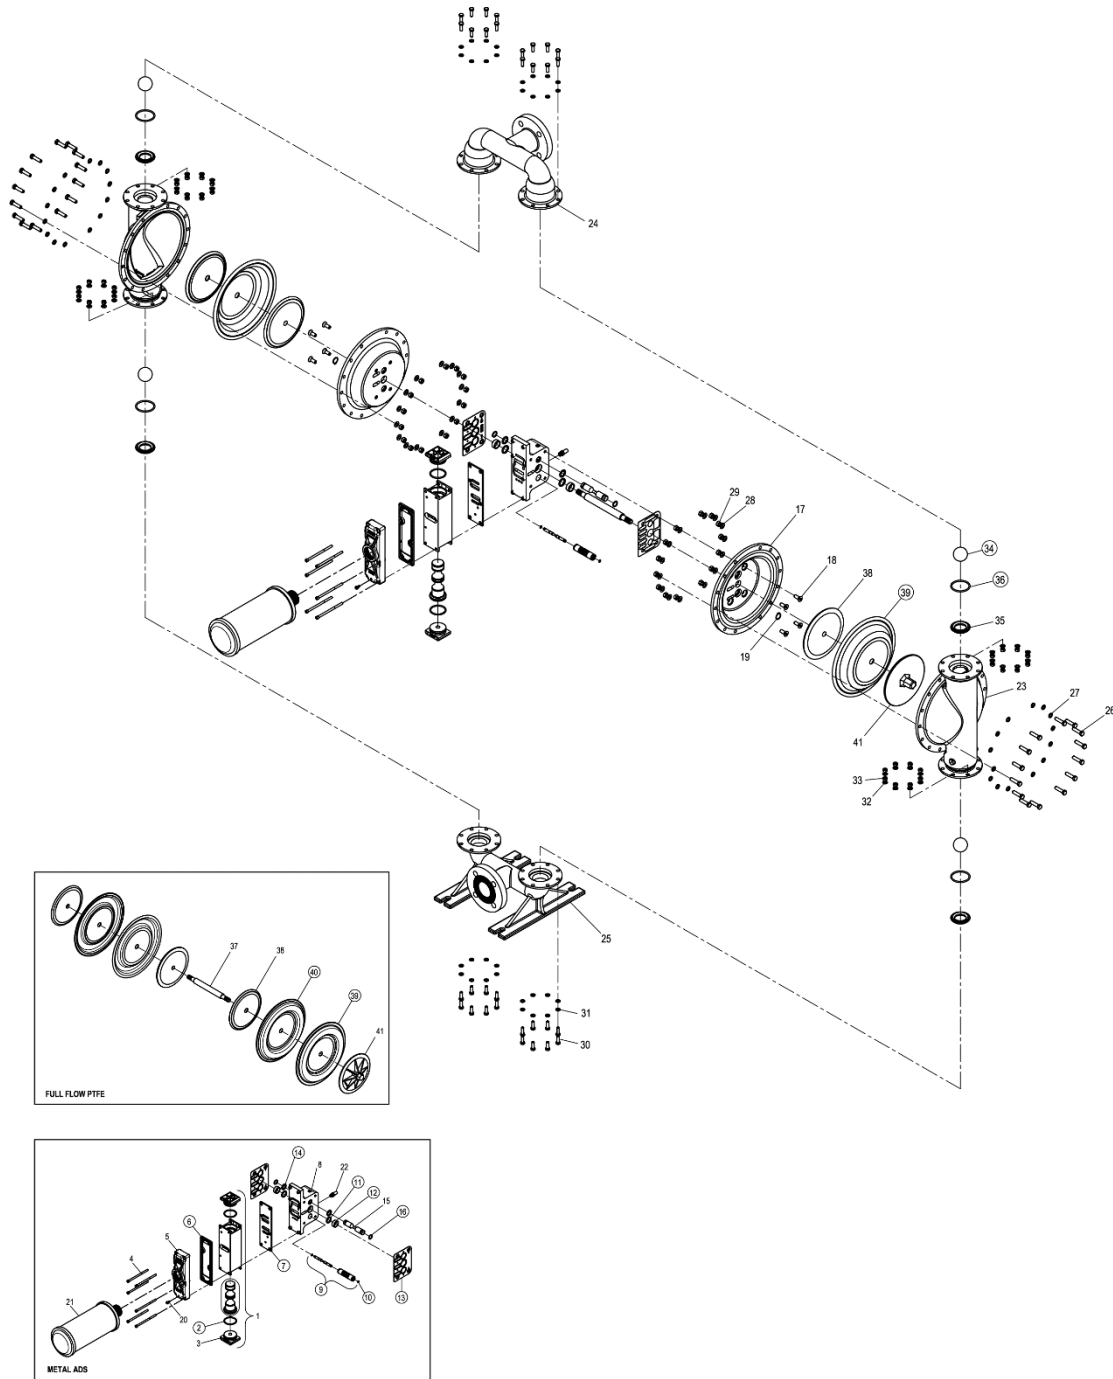

ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0504 REV. B

EXPLODED VIEW AND PARTS LIST

Item	Description	Model Description Qty.	XPS800/HHAAA/	XPS800/HHSSS/
			P/N	P/N
Air Distribution Components				
1	Air Valve Assembly, Pro-Flo Shift™ 1	1	04-2039-01	04-2039-03
2	O-Ring, End Cap (-225, Ø1.859" x Ø.139")	2	04-2390-52-700	
3	End Cap	2	04-2340-01	04-2340-03
4	Screw, SHC, Air Valve (1/4"-20 x 4-1/2")	6	01-6000-03	
5	Muffler Plate, Pro-Flo Shift™	1	04-3189-01	04-3189-03
6	Gasket, Muffler Plate, Pro-Flo Shift™	1	04-3509-56	
7	Gasket, Air Valve, Pro-Flo Shift™	1	04-2639-56	
8	Center Block Assembly, Pro-Flo Shift™ 2	1	04-3129-01	04-3129-03
9	Pilot Sleeve Assembly	1	04-3880-99	
10	O-Ring, Pilot Spool Retaining (-009, Ø.208" x Ø.070")	2	04-2650-49-700	
11	Seal, Shaft	2	08-3210-55-225	
12	Bushing, Shaft	2	08-3306-13	
13	Gasket, Center Block Pro-Flo V™	2	04-3529-56	
14	Seal, Air Control Spool	2	04-3219-49	
15	Air Control Spool	1	04-3859-13	
16	O-ring, Air Control Spool Retaining (-114, Ø.612" x Ø.103")	2	04-3879-50	
17	Air Chamber, Pro-Flo V™	2	08-3690-01	08-3690-03
18	Screw, HSFHS (3/8"-16 x 1")	8	71-6250-08	71-6250-03
19	Retaining Ring	2	04-3890-03	
20	Grounding Screw, (10-32 x 1/2") Self Tapping	1	04-6345-08	
21	Muffler 1-1/2" MNPT	1	04-3518-99R	04-3513-99
22	Muffler 1/4" MNPT	1	04-3240-07	
Wetted Path Components				
23	Liquid Chamber, Bolted	2	08-5000-04-40	
24	Manifold, Discharge (ANSI)	1	08-5020-04-42	
	Manifold, Discharge (DIN)	1	08-5020-04-43	
25	Manifold, Inlet (ANSI)	1	08-5080-04-42	
	Manifold, Inlet (DIN)	1	08-5080-04-43	
26	Screw, HHC (3/8"-16 x 1-3/4")	28	04-6181-03	
27	Washer, Flat (Ø.390" x Ø.625" x .063")	28	02-6730-03	
28	Washer, Belleville (Ø.380" x Ø.750" x .056")	28	08-6820-03-42	
29	Hex Nut (3/8"-16)	28	02-6430-03	
30	Screw, HHC (5/16"-18 x 1")	32	08-6180-03-42	
31	Washer, Flat (Ø.328" x Ø.562" x .063")	32	08-6730-03-42	
32	Washer, Belleville (Ø.317" x Ø.625" x .047")	32	08-6810-03-42	
33	Hex Nut (5/16"-18)	32	08-6400-03	
Valve Balls/Valve Seats/Valve O-Rings				
34	Ball, Valve	4	*	
35	Seat, Valve	4	*	
36	O-Ring, Valve Seat, PTFE Fitted (-334, Ø2.600 x Ø.210)	4	08-1200-55	
Full Stroke Rubber/TPE/PTFE Components				
37	Shaft (Rubber)	1	08-3810-03	
	Shaft (PTFE)	1	08-3812-03	
38	Piston, Inner	2	08-3700-01	08-3700-03
39	Diaphragm, Primary	2	*	
40	Diaphragm, Back-Up	2	*	
41	Piston, Outer	2	08-4550-04	

LW0505 Rev. B

* See elastomer chart - Section 9




¹ Air Valve Assembly includes items 2 and 3.

² Metal Center Block Assembly includes item 11, 12, and 14.

All boldface items are primary wear parts.

EXPLODED VIEW AND PARTS LIST

PS1500 ALLOY C

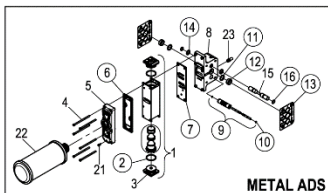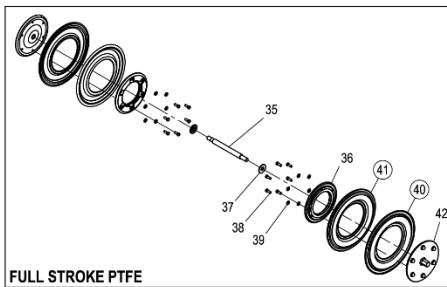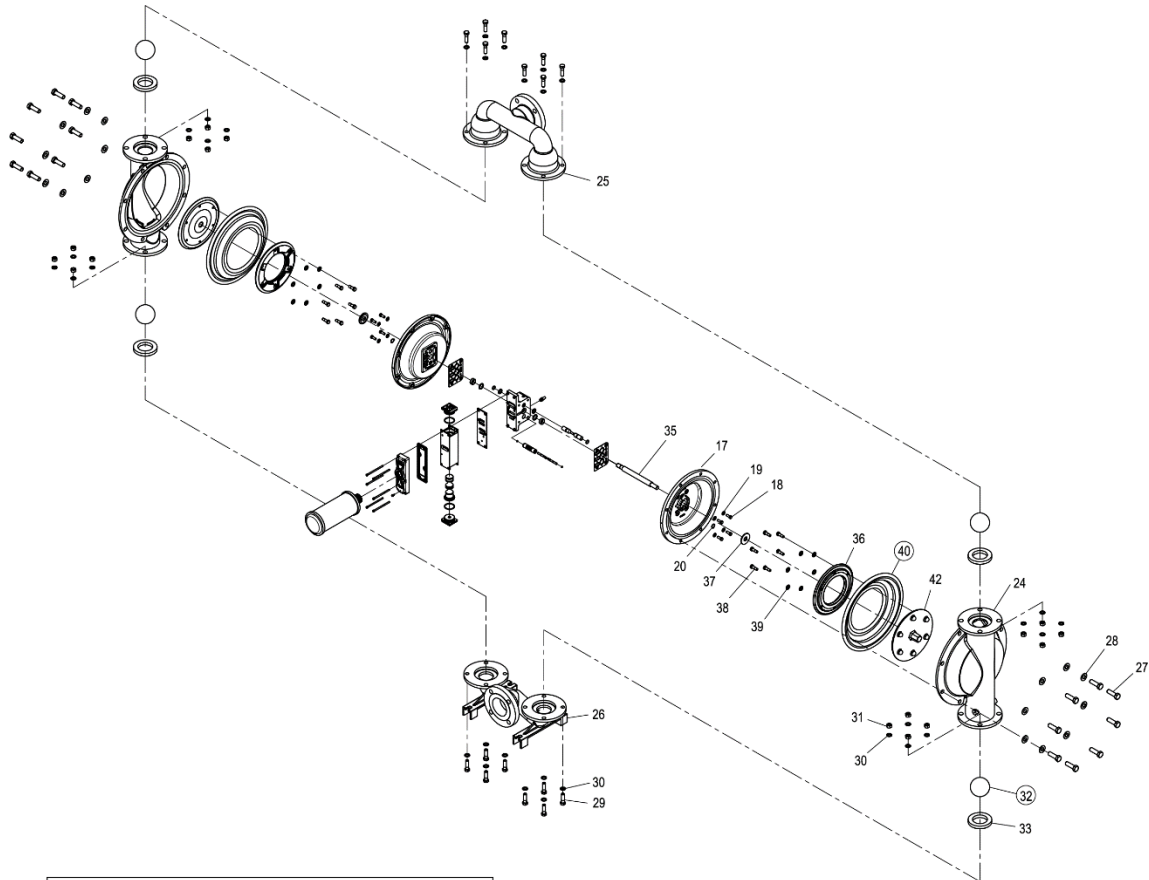

ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0506 REV. B

EXPLODED VIEW AND PARTS LIST

Item	Description	Model Description	XPS1500/HHAAA/...		XPS1500/HHSSS/...	
			Qty.	P/N	P/N	
Air Distribution Components						
1	Air Valve Assembly, Pro-Flo Shift™ 1		1	04-2039-01		04-2039-03
2	O-Ring, End Cap (-225, Ø1.859" x Ø.139")		2			04-2390-52-700
3	End Cap		2	04-2340-01		04-2340-03
4	Screw, SHC, Air Valve (1/4"-20 x 4-1/2")		6			01-6000-03
6	Muffler Plate, Pro-Flo Shift™		1	04-3189-01		04-3189-03
7	Gasket, Muffler Plate, Pro-Flo Shift™		1			04-3509-56
8	Gasket, Air Valve, Pro-Flo Shift™		1			04-2639-56
9	Center Block Assembly, Pro-Flo Shift™ 2		1	15-3129-01		15-3129-03
11	Pilot Sleeve Assembly		1			15-3884-99
12	O-Ring, Pilot Spool Retaining (-009, Ø.208" x Ø.070")		2			04-2650-49-700
13	Seal, Shaft		2			15-3210-55-225
14	Bushing, Shaft		2			15-3306-13
15	Gasket, Center Block Pro-Flo Shift™		2			04-3529-56
16	Seal, Air Control Spool		2			04-3219-49
17	Air Control Spool		1			15-3859-13
18	O-Ring, Air Control Spool Retaining (-114, Ø.612" x Ø.103")		2			04-3879-50
19	Air Chamber, Pro-Flo V™		2	15-3691-01		15-3690-03
20	Screw, HHC (3/8"-16 x 1-1/8")		8	15-6130-08		
	Screw, HHC (3/8"-16 x 1")		8			08-6130-03
21	Washer, Flat (Ø.406" x Ø.812" x .065")		8	15-6740-08-50		04-6740-03
22	Retaining Ring		2			04-3890-03
23	Grounding Screw, (10-32 x 1/2") Self Tapping		1			04-6345-08
26	Muffler 1-1/2" MNPT		1	04-3518-99R		04-3513-99
27	Muffler 1/4" MNPT		1			04-3240-07
Wetted Path Components						
28	Liquid Chamber, Bolted		2			15-5005-04
29	Manifold, Discharge (ANSI)		1			15-5030-04
	Manifold, Discharge (DIN)		1			15-5031-04
30	Manifold, Inlet (ANSI)		1			15-5090-04
	Manifold, Inlet (DIN)		1			15-5091-04
31	Screw, HHC (5/8"-11 x 2")		16			15-6180-03
32	Spring, Disk (5/8")		16			15-6820-03
33	Screw, HHC (1/2"-13 x 1-3/4")		16			15-6182-03
34	Spring, Disk (1/2")		32			15-6810-03
35	Hex Nut (1/2"-13)		16			15-6420-03
Gaskets/Valve Balls/Valve Seats/Valve O-Rings						
36	Ball, Valve		4			*
37	Seat, Valve		4			*
38	O-Ring, Valve Seat PTFE Fitted (-342, Ø3.600" x Ø.210") (Not Shown)		4			15-1200-55
Full Stroke Rubber/TPE/PTFE Components						
39	Shaft		1			15-3805-03
40	Piston, Inner		2			15-3700-01
41	Washer, Inner Piston Back-up		2			15-6850-08
42	Screw, HHC (3/8"-16 x 1-1/8")		12			15-6130-08
43	Washer (Ø.406" x Ø.812" x .065")		12			15-6740-08-50
44	Diaphragm, Primary		2			*
45	Diaphragm, Back-Up		2			*
46	Piston, Outer		2			15-4550-04

LW0507 REV. B

* See elastomer chart - Section 9

¹ Air Valve Assembly includes items 2 and 3.

² Metal Center Block Assembly includes item 11, 12, and 14.

All boldface items are primary wear parts.

SECTION 9

ELASTOMER OPTIONS

PS400 ALLOY C

MATERIAL	DIAPHRAGM (2)	FULL-STROKE DIAPHRAGMS (2)	FULL-STROKE BACK-UP DIAPHRAGMS (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)
FKM	04-1010-53			04-1080-53	04-1120-53	
PTFE		04-1040-55-42		04-1080-55		04-1200-55 ¹
Saniflex™			04-1065-56			
FDA Wil-Flex®			04-1065-57			
Alloy-C					04-1121-04	

¹ Used in conjunction with metallic valve seat.

LW0503 Rev. B

PS800 ALLOY C

MATERIAL	DIAPHRAGM (2)	FULL-STROKE DIAPHRAGMS (2)	FULL-STROKE BACK-UP DIAPHRAGMS (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)
FKM	08-1010-53			08-1080-53	08-1120-53	
PTFE		08-1040-55-42		08-1080-55		08-1200-55 ¹
Saniflex™			08-1065-56			
FDA Wil-Flex®			08-1065-57			
Alloy C					08-1121-04	

¹ Used in conjunction with metallic valve seat.

LW0505 Rev. B

PS1500 ALLOY C

MATERIAL	DIAPHRAGM (2)	FULL-STROKE DIAPHRAGMS (2)	FULL-STROKE BACK-UP DIAPHRAGMS (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)
FKM	15-1010-53			15-1080-53	15-1120-53	
PTFE		15-1040-55-42		15-1080-55		15-1200-55 ¹
Saniflex™			15-1065-56			
FDA Wil-Flex®			15-1065-57			
Alloy C					15-1121-04	

¹ Used in conjunction with metallic valve seat

LW0507 REV. B

WILDEN®

PSG
22069 Van Buren Street
Grand Terrace, CA 92313-5651 USA
P: +1 (909) 422 -1730
psgdover.com



Where Innovation Flows

PSG® reserves the right to modify the information and illustrations contained in this document without prior notice. This is a non-contractual document.